

**VERVE®**



# **Elevate Ice Bath**

## **USER MANUAL**

---

[vervefitness.com.au](https://vervefitness.com.au)

# TABLE OF CONTENTS

This guide includes everything you need to set up, use, and maintain your chiller. From installation tips to Wi-Fi setup and cleaning instructions, each section is designed to help you operate your unit with ease.

---

**02** SAFETY INFORMATION

**08** WIFI SETUP

**03** ASSEMBLY INSTRUCTIONS

**09** TUYA SMART  
INTERFACE GUIDE

**04** PRODUCT OVERVIEW

**10** MAINTENANCE & CLEANING

**05** SPECIFICATIONS

**12** TROUBLESHOOTING GUIDE

**06** ASSEMBLY GUIDE

**13** FAULT CODE SOLUTIONS

**07** FUNCTIONS

# IMPORTANT SAFETY INFORMATION

For your safety and the optimal performance of your Elevate Ice Bath, please ensure you read and follow all safety precautions and instructions outlined in this manual.

**1. Warning:** Ensure children do not use this product unsupervised.

**2. Drowning Risk:** Prevent unauthorised access to the ice bath.

**3. Electric Shock:** Place at least 1.5 meters away from all electrical devices.

**4. Temperature Caution:** Measure water temperature accurately.

Avoid using the Elevate Ice Bath if under the influence of alcohol, drugs, or medication, as this can increase the risk of drowning.

**5. Medical Advisory:** Consult a doctor before use if you have obesity, heart disease, circulatory issues, diabetes, or are taking medication.

**6. Pregnancy:** Pregnant women should consult a physician before use.

**7. Cover Safety:** Secure the cover with straps and clips to prevent unsupervised access.

**8. Avoid Injury:** Exercise caution when entering or exiting.

---

## INSTALLATION LOCATION

1

### Sturdy Foundation

Use pavers at least 5cm thick and 30cm square.

2

### Deck Installation

Verify your deck's weight capacity (minimum 1,500 lbs) with a structural engineer.

3

### Climate Conditions

Avoid placing the Elevate Ice Bath in temperatures below 1°C with water inside.

# ASSEMBLY INSTRUCTIONS

For the easiest possible assembly of your VERVE Elevate Ice Bath, please read the following instructions carefully.

## **CAUTION:** Risk of Injury or Property Damage

**1. Installation Location:** Do not install the chiller in confined spaces like closets, cabinets, or other small enclosures.

**2. Ventilation:** Never cover the intake or exhaust openings with clothes, towels, or any other objects.

**3. Safety Around People:** Exercise extreme caution when operating the chiller near children, the elderly, or those who are infirm.

**4. Foreign Objects:** Never insert fingers or foreign objects into the ventilation grilles or any other parts of the chiller.

**5. Power Cord:** Avoid placing heavy objects on the power cord or running it under carpets or rugs, as this can damage the cord.

**6. Physical Interaction:** Do not climb, sit, or stand on the chiller, and avoid placing objects on top of it.

**7. Operator Age:** Only persons 18 years or older should operate the chiller.



Tuya Smart

## APP DOWNLOAD

Tuya only supports a 2.4G Wi-Fi signal. Before connecting your phone to the machine, please ensure that your phone is using a 2.4G frequency band. If your phone is connected to a 5G frequency band, it will not be able to connect to the machine.

# PRODUCT OVERVIEW



Accessories(For XY-08-OC/XY-08-HC/XY-10-OC/XY-10-HC/XY-20-OC/XY-20-HC)



Inner Strainer Wrench



Filter Elements (Optional)



Water Pipes



(Inner Teeth 3/4" )  
(Outer Teeth 1/2")  
Quick Connectors



Rubber Seals



Warning Label



Operation Label


# PRODUCT SPECIFICATIONS



Specification	Details
<b>Horse Power</b>	1 HP
<b>Model No.</b>	VER-CHL-01W
<b>Power Supply</b>	220-240V 50/60HZ
<b>Input power</b>	1060(110-1240)W
<b>Max Input Current</b>	6.5A
<b>Cooling Capacity</b>	2450(650-3730)W
<b>Heating Capacity</b>	3270(800-4310)W
<b>Heating Function</b>	Yes
<b>Cooling Function</b>	Yes
<b>Water Temperature</b>	3°C - 42°C (adjustable)
<b>Ozone Disinfection</b>	Yes

Specification	Details
<b>Circulation Pump</b>	Yes
<b>Water Filter</b>	Yes
<b>Remote Control</b>	iOS & Android App, WiFi
<b>Refrigerant</b>	R410A
<b>Transport Wheels</b>	Yes
<b>Carry Handle</b>	Yes
<b>Quick Connectors</b>	Yes
<b>Net Weight</b>	35kg
<b>Product Dimensions</b>	510L * 430W * 555H (cm)
<b>Certification</b>	PSE , CE , SAA , IPX-4 , FCC , RCM

# ASSEMBLY GUIDE

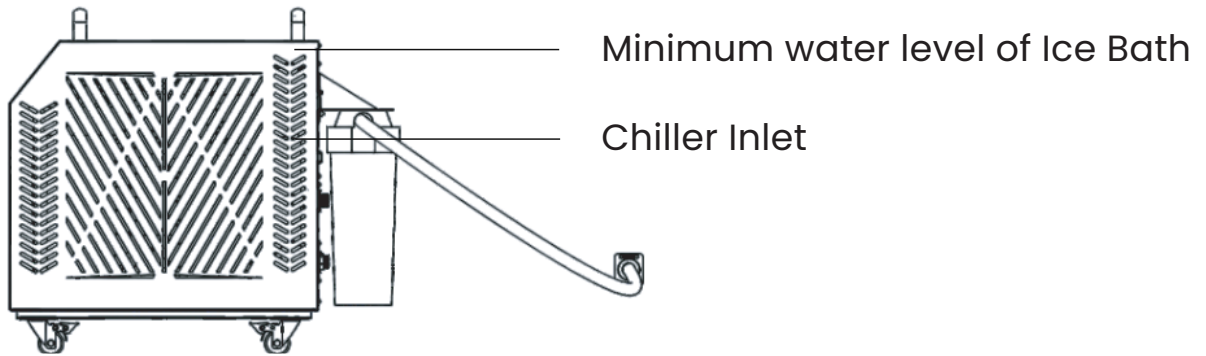

## STEP ONE Positioning

Place the Elevate Ice Bath and Chiller on a level surface.

## STEP TWO Install Filter

Place the filter in the cup and screw halfway to allow air release when filling.

## STEP THREE Hose Connections

- Attach hoses to the chiller and the ice bath's inlet and outlet.
- Ensure proper water flow by connecting the upper inlet hose to the water inlet pipe and the lower outlet hose to the chiller outlet.

## STEP FOUR Filling the Bath

Fill with water up to 20cm below the rim, covering both inlet and outlet.

## STEP FIVE Air Release

Release air from the chiller by allowing water to flow through the filter and drain valve.

## STEP SIX POWER ON

Release air from the chiller by allowing water to flow through the filter and drain valve.

## STEP SEVEN EMPTY BATH

Pull out the drain hose under the bath and connect to a hose if needed to release water.


# FUNCTIONS



## Status Icons






The corresponding icon will only light up when the current function is turned on.


Long press **1** to power ON or OFF. 

Long press **2** to switch temperature units: Fahrenheit / Celsius. 

Long press **3** to configure the network. The WIFI icon will blink during configuration, and the icon will remain steadily lit once network configuration is successful.  

**4** - Start temperature setting/confirm current temperature value. 



**5** - Move cursor up/increase temperature (long press for 5 seconds to activate heating mode, the heating icon will blink 5 times).   


**6** - Move the cursor down to decrease the temperature (long press for 10 seconds to restore factory settings; this button is disabled during power-up operation). 

Automatic power-on when connected to electricity: Press button **2**, then long press button **3**.

Activate ozone sterilization: Press button **3**, then long press button **2**.


Adjust the time using buttons **5** and **6**.

Remarks: **5** **6** Press the up and down buttons at the same time to open the child lock, and press the up and down keys to unlock the child lock.  

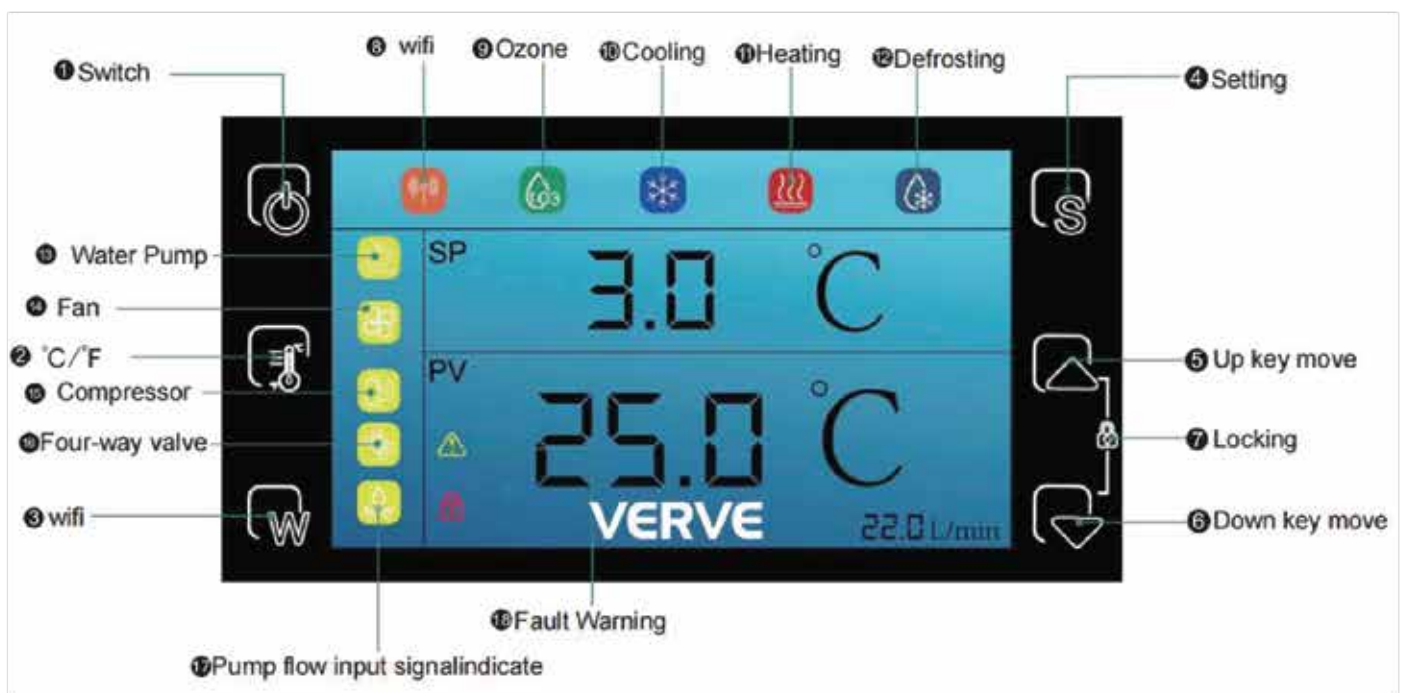




# WI-FI SETUP

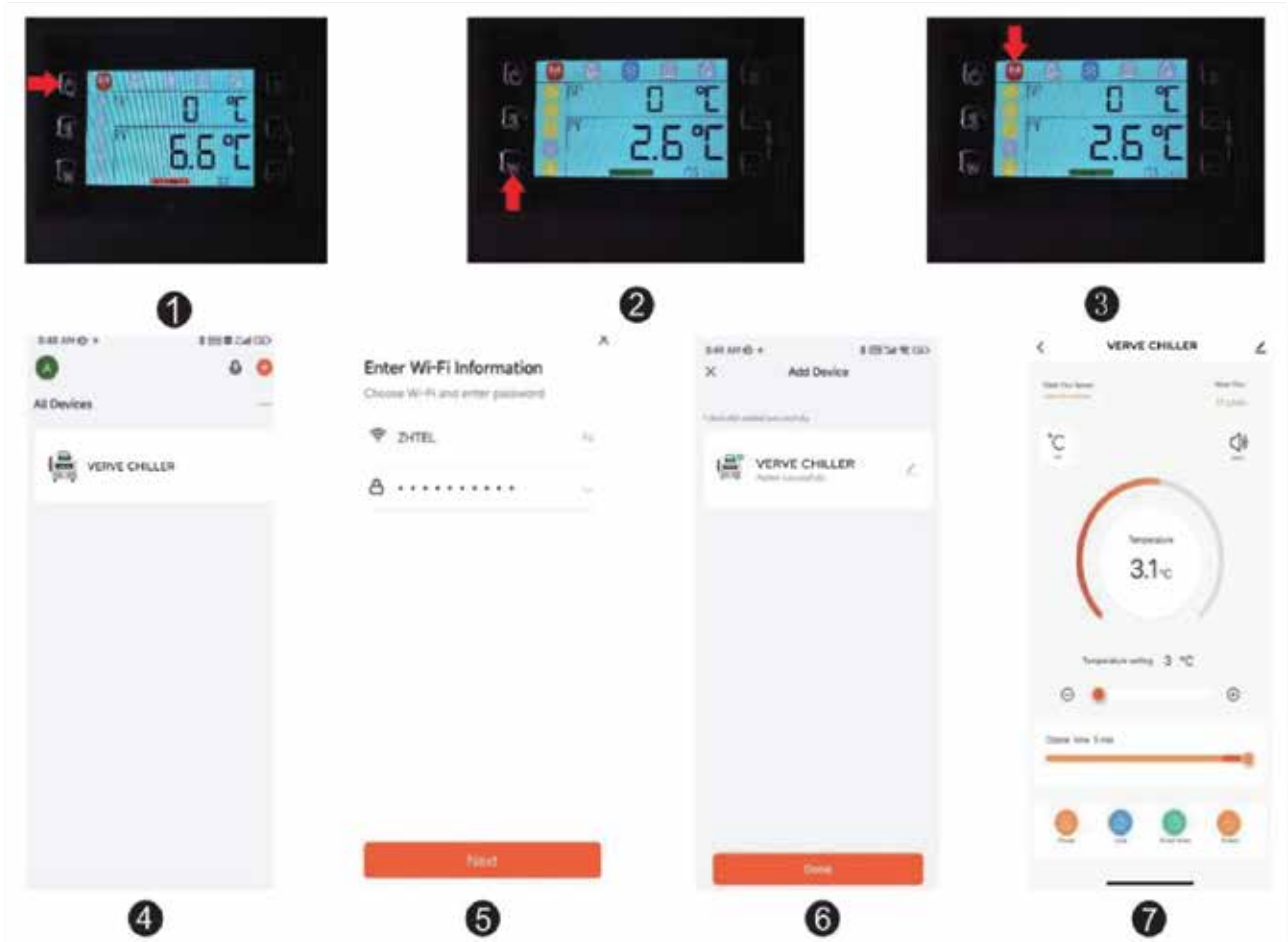

1. Turn on the chiller.
2. Enter Settings Mode: Press the Settings key on the chiller.
3. Activate Wi-Fi Pairing Mode: Press and hold the Wi-Fi key for 3-5 seconds until the Wi-Fi icon begins to blink.
4. Open the Tuya Smart App: On your phone, launch the Tuya Smart App.
5. Add Device: In the app, select Add Device to initiate pairing.
6. Connect to Wi-Fi: Ensure your phone's Wi-Fi is on, and enter the Wi-Fi password when prompted in the app.
7. Complete Pairing: Once the app recognizes the device, you will be directed to the app's main user interface, where you can control the chiller remotely.

# TUYA SMART INTERFACE GUIDE

1. Turn On/Off - Turn the chiller on or off.
2. Locking - Lock or unlock the control panel.
3. Temperature Unit Switching - Switch between Celsius (°C) and Fahrenheit (°F).
4. Water Flow - View the current water flow rate.
5. Set Time - Adjust the timer settings.
6. Sound - Toggle sound on or off.
7. Power-On Automatic Operation - Enable or disable automatic operation upon power-on.
8. Water Flow Sensor - Monitor the water flow sensor.
9. Ozone Working Time Interval - Adjust the ozone working interval from 0 (off) up to 5 minutes.
10. Temperature Adjustment - Set the desired temperature (range: 3-42°C / 37-107°F).
11. Current Temperature - Display the current temperature reading.

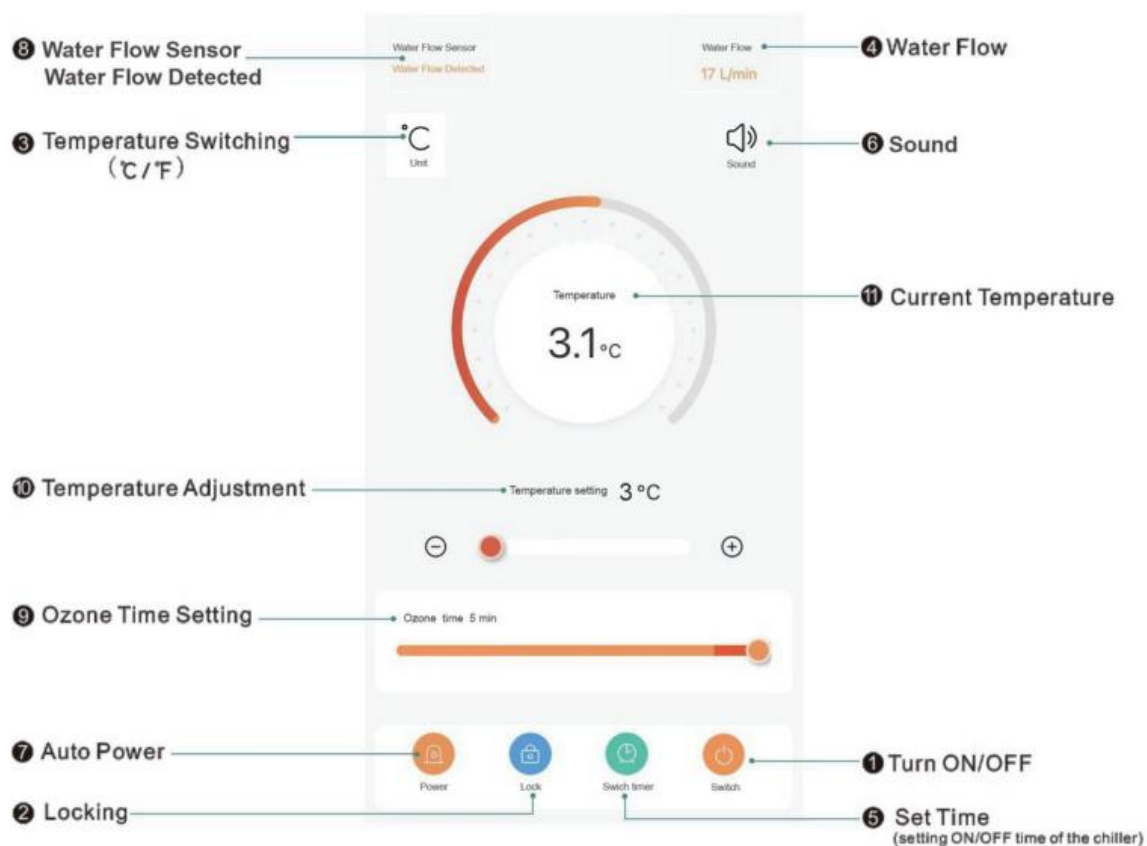


# MAINTENANCE & CLEANING

- 1. Never clean the chiller with bleach-based or strong detergents.
- 2. Do not use corrosive disinfectants, such as chlorine tablets, in the water.
- 3. Always disconnect the chiller from the power supply before performing any maintenance or cleaning.
- 4. Never leave the chiller outside in temperatures below 1°C if it contains water.
- 5. Open the drain outlet and empty the water in these situations:
  - When the machine will not be used for an extended period to prevent water quality deterioration.
  - If the ambient temperature is below 1°C to prevent freezing and potential damage to internal pipelines.

6. Replace the paper filter when it becomes dirty to maintain proper water flow and optimal performance.



7. Clean the built-in filter every four weeks or when water flow decreases. Open the lid with the filter wrench, remove the mesh filter, rinse with water, and reinstall. Tighten the lid with the plastic wrench.

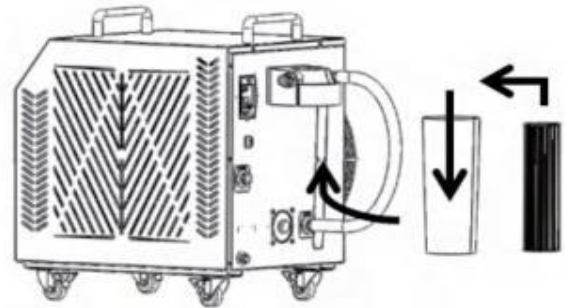

Open the lid with the built-in filter wrench.



Take out the mesh filter and rinse it with water.




Put in the clean mesh filter.




Close the lid with the plastic wrench

# MAINTENANCE & CLEANING

8. Clean the dust net every three months to maintain cooling/heating efficiency and ensure the condenser operates effectively.

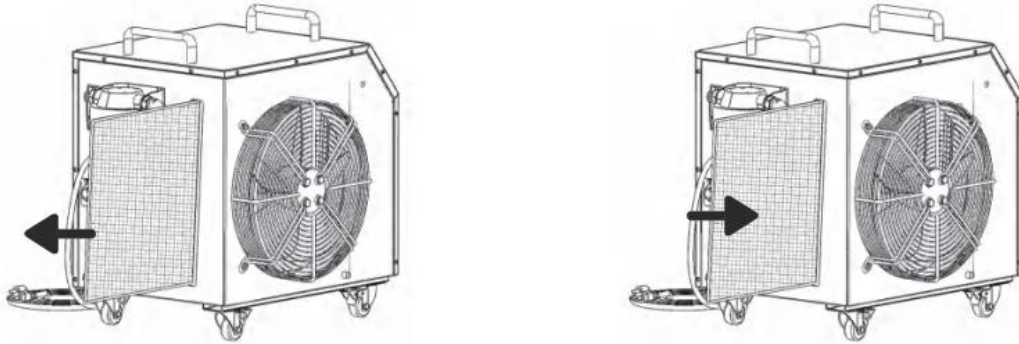

9. Place the chiller under shelter—do not expose it to direct sunlight, rain, or snow.

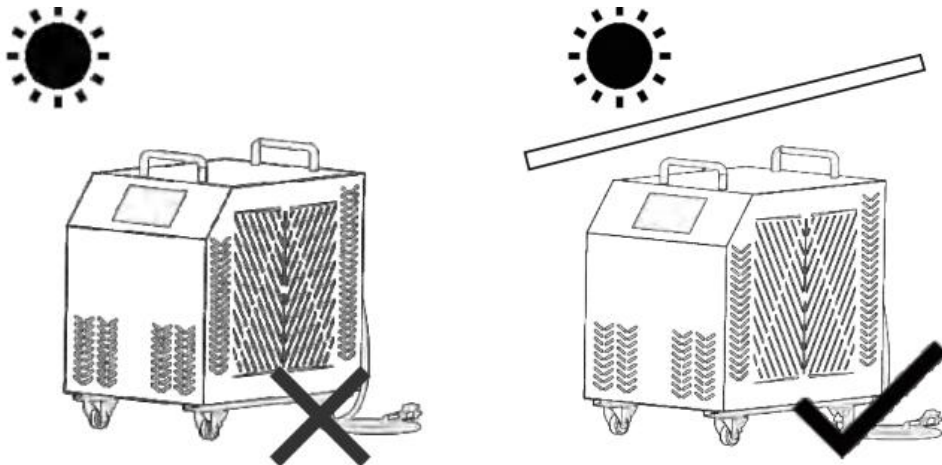

## PRECAUTIONS

- Do not block the fan outlet, as this will reduce heating and cooling efficiency and increase power usage.
- Keep the chiller and filter devices clean. Regularly inspect and clean all components.
- Do not touch the fan during operation to avoid injury.
- Ensure the chiller's rated voltage matches your power supply voltage.
- Avoid touching switches or electrical components with wet hands during operation.
- Do not turn the chiller upside down.
- Do not operate the chiller without a filter element installed.
- Maintain at least 100 cm (1 meter) of free space around the chiller for proper ventilation.

# TROUBLESHOOTING GUIDE

## Water Flow & Suction

**Connections:** Ensure all hose adapters and connectors are properly tightened, with the sealing ring in place if applicable.

**Water Filter:** Confirm the filter cup is hand-tightened and filled. To check, loosen the cup to let water run, then retighten.

**Filter Maintenance:** Inspect the paper filter and replace if needed. Clean the built-in steel mesh filter and dust filter on the fan.

**Hoses:** Verify that hoses are free of kinks and allow water to flow smoothly.

**Water Level:** Ensure the water level in the bath is at least 5cm above the chiller's water inlet.

**Restart:** Power off the chiller completely, then turn it back on.

**Flow Sensor:** If issues persist, this may indicate a flow sensor issue. Contact the supplier.

**Ozone Operation:** Water flow may reduce when the ozone function is active. Temporarily deactivate ozone to improve flow.

## Water Leak from the Chiller

**Tighten Connections:** Ensure all are secure, and inspect for splits or cross-threading. Consider using plumber's tape. Confirm the built-in steel mesh filter is tightened.

## Slow Cooling Speed

**External Factors:** Cooling speed may vary based on tub fill level, ambient temperature, and ventilation. Insulate the tub by keeping the cover on, and ensure proper ventilation around the chiller fan.

## Temperature Display Differs from Tub Water

**Temperature Sensor:** The temperature sensor is located inside the chiller, so expect a natural variance of +/- 1°C. Ambient temperature and environmental factors may also impact readings.

## Chiller Not Cooling or Heating After Restart

**Contact VERVE:** If the chiller fails to cool or heat after powering off and on, reach out to VERVE for assistance.

# FAULT CODE SOLUTIONS

**Alarm Instructions :** When the performance is affected but the machine can work normally, an alarm will sound. If it does not affect operation, no alarm will sound.

Error Code	Alarm	Reason	Solutions	Status
IN	NO	Bad panel connection	Re-plug both ends of the cable	Cannot Work
HH	YES	The water temperature is higher than the upper limit temperature	If there is a difference between the low water temperature and the displayed water temperature, the water temperature sensor is faulty.	Cannot Work
FL	YES	No water flow or too little water flow	<p>1. No water flow: The water pump is broken or stuck, and the waterway is blocked.</p> <p>2. Small water flow: There may be a tube folded in the waterway, the water flow is not smooth, or the waterway has not been cleaned for too long, causing blockage. Flush with an air gun if blocked.</p> <p>3. The water flow protection switch is broken: replace the water flow switch.</p>	Press and hold the mode button + setting button for 5 seconds to force the alarm to be dismissed, and the machine will work normally.
CHI	YES	Bad Sensor (Green)	Replace the NTC1 temperature sensor and restart the machine after replacement.	Cannot Work
HEA	NO	Heating Failure	The machine can only perform the cooling function.	Operational
ICE	YES	Water temperature below freezing point	Turn off the machine, pour hot water into the bucket and heat it for 20 minutes, then turn it on again. If antifreeze solution is used, press the MODE + SET button simultaneously to force cancel the alarm.	Press key2 + key3 at the same time for 3 seconds to cancel the alarm, returning the machine to operational.
PA	NO	Sensor failure (red)	Replace the NTC3 temperature sensor	Operational
AA	NO	NTC4 Temperature Sensor Failure	Replace the NTC4 temperature sensor	Operational